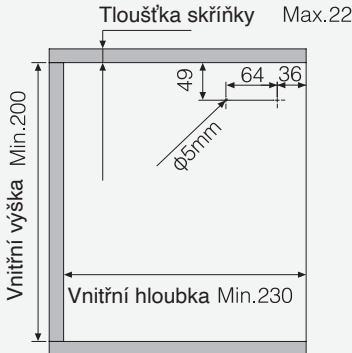
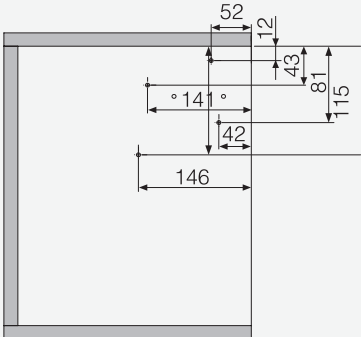
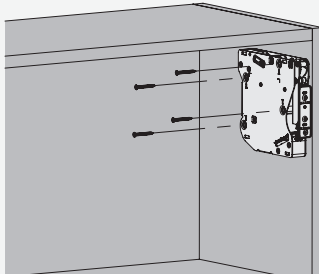
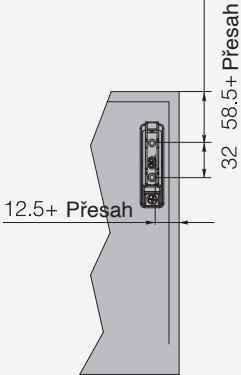
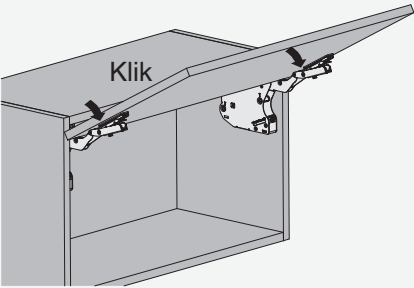
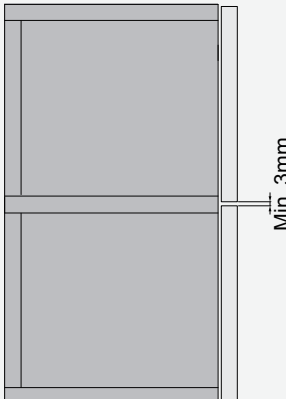
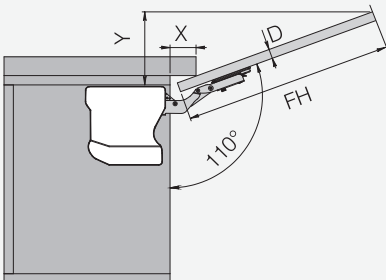


Nastavení výklopného mechanismu	Upevnění polohy	Připevněte mechanismus																		
																				
Přední montáž		Minimální mezera																		
 																				
Potřebný prostor																				
		<table><tr><td>D</td><td>16</td><td>18</td><td>22</td><td>26</td><td>28</td></tr><tr><td>X</td><td>43</td><td>39</td><td>30</td><td>18</td><td>12</td></tr><tr><td>Y</td><td colspan="5">Y=FHx0.31-15+D</td></tr></table>	D	16	18	22	26	28	X	43	39	30	18	12	Y	Y=FHx0.31-15+D				
D	16	18	22	26	28															
X	43	39	30	18	12															
Y	Y=FHx0.31-15+D																			